


GM5L40E

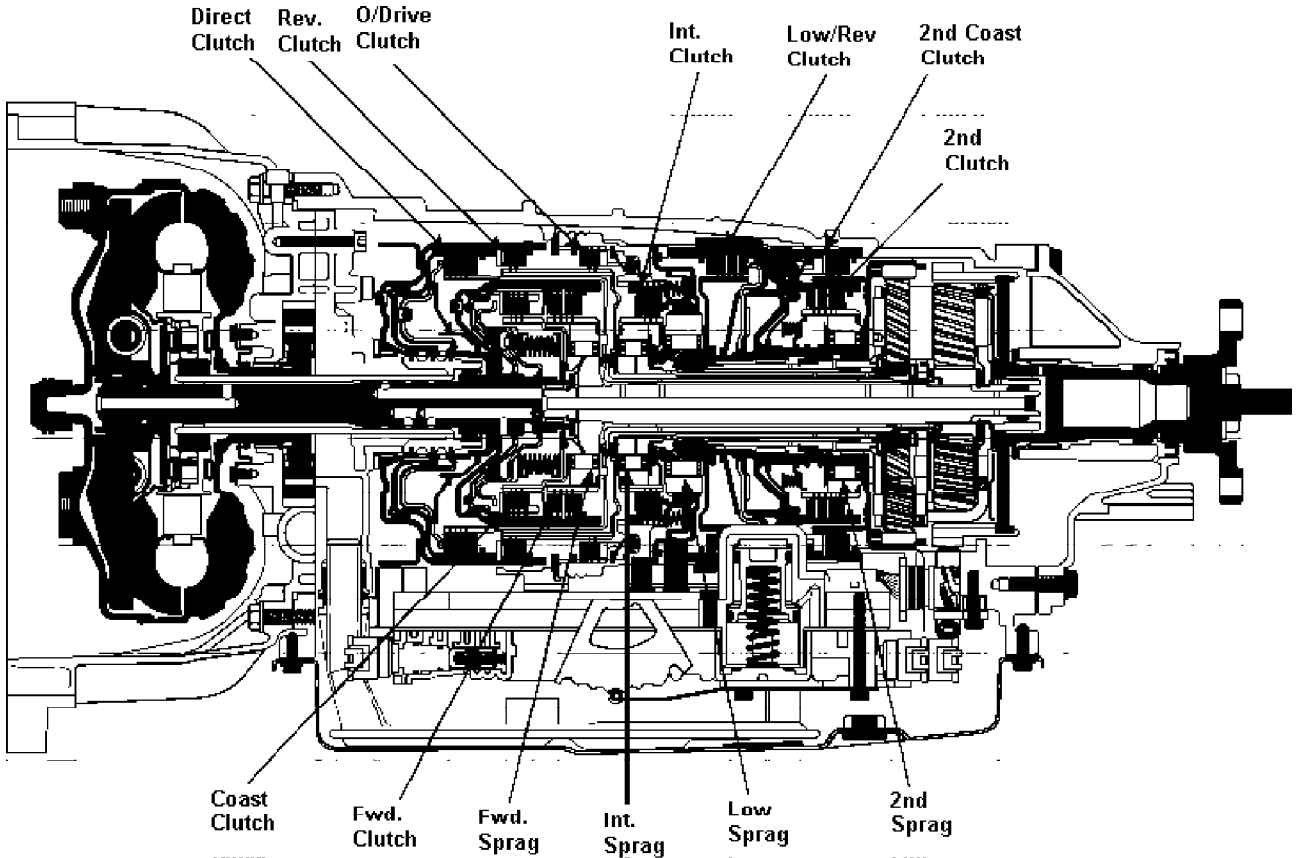

5L40E Clutch Application Chart

Range	Gear	Engine Braking	Direct Clutch	Coast Clutch	Rev. Clutch	Fwd Clutch	2nd Clutch	Int. Clutch	O.D Clutch	Low/ Rev Clutch	2nd Coast Clutch	Fwd Clutch Sprag	Low Clutch Sprag	2nd Clutch Sprag	Int. Clutch Sprag
Park/Neutral															
Reverse	R	Yes			On					On					
D,4,3,2	1st	No*		On		On						Hold	Hold		
	1st	Yes		On		On				On		Hold	Hold		
	2nd	No*		On		On	On					Hold		Hold	
	2nd	Yes		On		On	On				On	Hold		Hold	
	3rd	No*		On		On	On	On				Hold			Hold
	3rd	Yes		On		On	On	On	On			Hold			Hold
	4th	Yes	On	On		On	On	On	On			Hold			
	5th	Yes	On			On	On	On	On						

5L40E Solenoid Application Chart

Range	Gear	Engine Braking	1-2 Shift Sol	2-3 Shift Sol	4-5 Shift Sol	TCC Sol
Park/Neutral						Off
Reverse	R	Yes	On			Off
D,4,3,2	1st	No*	Off	On	Off	Off
	1st	Yes	Off	On	On	Off
	2nd	No*	On	On	Off	On
	2nd	Yes	On	On	On	On
	3rd	No*	On	On	Off	On
	3rd	Yes	On	Off	On	On
	4th	Yes	Off	Off	On	On
	5th	Yes	Off	Off	Off	On

