



JF506E

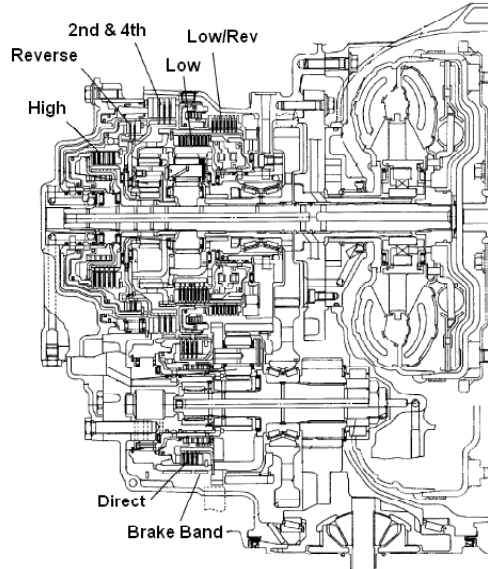

	O/D Switch	Gear	Engine Braking	Low Clutch	2-4 Brake	High Clutch	Rev. Clutch	Low Rev. Brake	Red. Brake	Direct Clutch	Low O.W.C	Red. O.W.C	
P								X					
R		Reverse	Yes			X	X	X					
		Reverse Inhib.Con	No			X		X					
N								X					
D	Off	1st	No	X							X*	X*	
		2nd	No	X	X							X*	
		3rd	No	X		X							X*
		4th	No		X	X							X*
		5th	Yes		X	X				X			
	On	5th	No	X								X*	X*
		5th	No	X	X								X*
		5th	No	X		X							X*
			Yes		X	X			X				
		5th*	Yes		X	X				X			
3		No	X	X									
		Yes	X		X			X				X*	
	4th*	Yes		X	X			X					
	5th*	Yes		X	X				X				
		Yes	X	X				X					
2		3rd*	Yes	X		X		X					
		4th*	Yes	X		X		X					
		4th*	Yes		X	X		X					
		5th*	Yes		X	X			X				

X* Transmits Torque only when Driving

* To prevent engine overspeed, inhibits down shift until the engine speed is reduced to preset

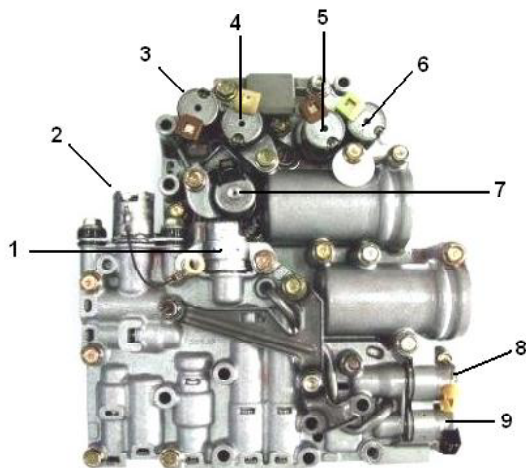

- 1 Low Clutch Timing Solenoid 86.SW.04
- 2 Line Pressure Duty Solenoid 86.SW.07
- 3 Shift Solenoid 'A' 86.SW.01
- 4 Reduction Timing Solenoid 86.SW.05
- 5 Shift Solenoid 'B' 86.SW.02
- 6 Shift Solenoid 'C' 86.SW.03
- 7 Lock-up Solenoid 86.SW.09
- 8 2-4 Brake Duty Solenoid 86.SW.08
- 9 2-4 Brake Timing Solenoid 86.SW.06

Ford/VW

Shift Solenoid	1st	2nd	3rd	4th	5th
A	X		X	X	
B				X	X
C		X	X		